

T10 & K1 Screens



Fitting Instructions

www.flydor.co.uk

t: 01603 897 799 **e:** sales@flydor.co.uk

 
 


Please read through before installing.

(This guide is generic and intended for all T10 & K1 screen types.)

All versions

To fit **handle** to the screen, punch and predrill a 3mm pilot hole (*pic C*), and then screw directly to frame (*pic D*).

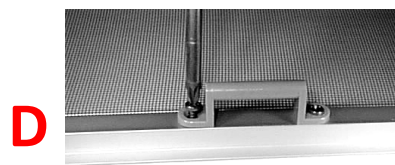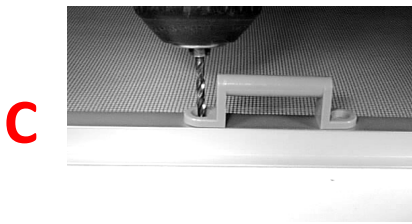

Fitting of the fixed frame screen (or subframe).

Fix the screen to the existing window frame by drilling through the profile and screwing directly. (*Tip*) Drill small exit hole and a larger entry hole and fill with a suitable cover cap for a neater finish.

Fitting of the hinged screen.

To fit the **hinges**, position the larger part of the hinge to the screen and attach by punching and pre-drilling as above. Offer the screen to the window frame (or subframe) and mark where the remaining part of the hinge is to be fitted. Predrill and screw directly to the frame. (*Tip*) Hinges can be fitted to allow lift out operation if desired.



Fit the **turnbutton** with a single screw to the window frame, so when pivoted they will overlap onto the lip of the flyscreen profile.

(*Tip*) Turnbuttons can be used instead of hinges to provide an alternative lift off operation .

