

Unika Door Screen



Fitting Instructions


www.flydor.co.uk

t: 01603 897 799 **e:** sales@flydor.co.uk




Unika Door Screens (All MUH & MUH2 models)

Step 1 Before proceeding, decide which of fitting options you wish to use and prepare the top and bottom guides prior to assembling the unit.

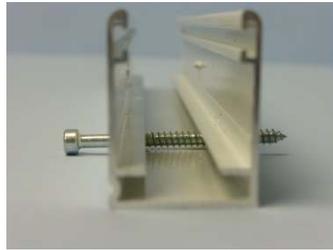


FACE FITTING Option A Drill a 3.5 mm hole through the outer groove, ensuring you remain within the recessed area in pic 2.

(Tip) Use a 2mm bit for the pilot hole into the frame. Please note you will need a hex bit for the screws

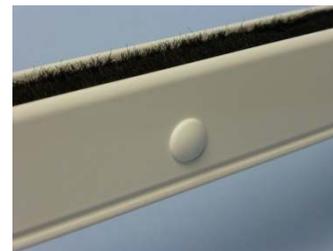

FACE FITTING Option B Drill directly through the guide using a 3mm bit. Open up the front facing hole to 7mm and use the cover caps provided for a neat finish.


(Tip) Use a small screw (3.5x 16) to affix to frame.

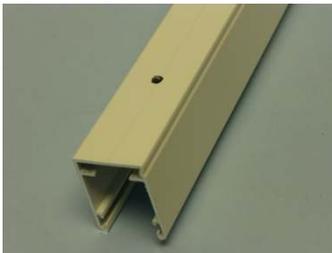

RECESS FITTING Option C Drill 3.5 mm holes through the bottom of guides, for directly fixing into the recess. Typically two or three depending on height.


(Tip) Use the special tool 8460.0 to allow the fluffy pile to be safely moved when fitting.

Step 2 Securing the Fluffy pile

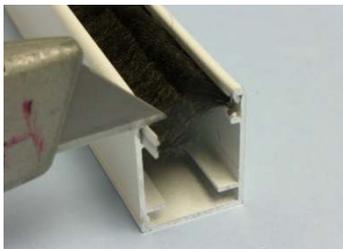

To avoid the fluffy pile being pulled back into the cassette during use. Trim about 6mm off the length of the pile. Simply crimp the channel at each end with a flat headed screwdriver and hammer. *(Tip) Gently does it! Avoid bending the guide out of shape by hitting too hard.*

Step 3 Preparing the Cassette(s) prior to assembling the unit.

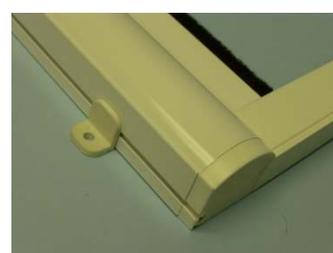


FACE FITTING Slide the face fitting L into the groove on the top of the cassette .




RECESS FITTING Insert the additional fluffy pile into the groove in the top of the cassette. The M bracket is directly fixed to the side of the recess and the cassette simply clicks in place .

Step 4 Preparing the Magnetic Catch Channel (Single Door).

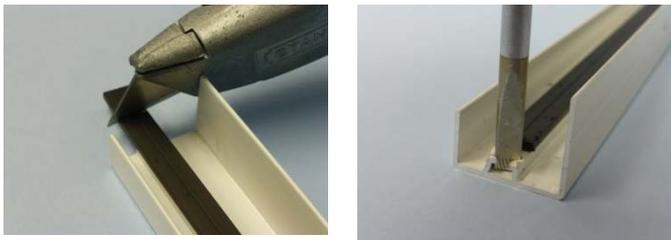

Snip off a small piece of the magnet. Crimp both ends as shown to secure the strip in place.

Step 5 Assembling the unit prior to fitting.

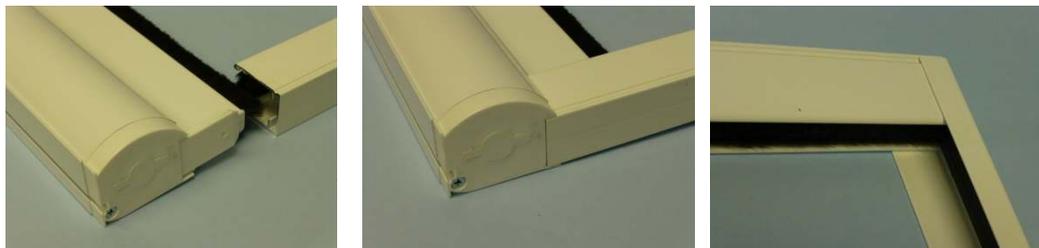

Push the guides into place ensuring the lugs are correctly located. There should be no gaps as per pic 2. Push the mag channel onto the guide ends.

Step 6 Installation of the unit.



FACE FITTING Offer the screen against the frame, ensure the screen is square, then mark the fixing points. Carefully drill the pilot holes. Loosely fit the screen in place using suitable screws. Check operation of screen, before tightening.


RECESS FITTING Offer the screen into the recess, ensure the screen is square, then mark the fixing points for M clips. Remove the screen, Directly fit the M Clips to the side of recess. Click the screen into place. Mark the fixing points for the channels and Mag Channel. Directly fix the screen with suitable screws and fittings as required.

Step 7 Shoot Bolt Catches (Double Door)



Bring both doors together and mark dead centre, top and bottom. Offer up the shoot bolt keepers as shown and mark for drilling in the centre the large elongated hole. Loosely fix the keepers into place with the screws provided. (This will give you a little adjustment if needed). Check the doors are square and working properly before drilling the smaller hole, and securing the keeper finally into place.

To Operate the screens . *Single Door* Gently pull the screen across to the mag catch channel. **Double Door** bring the slave door over to the centre of the screen and secure in place with the shoot bolts. The main door pulls across to the slave door and is held in place by the magnetic strips. To open (Both single and double) break the magnetic seal by gently pulling the handle towards you. **Do not pull “apart”** The Mesh will then gently retract back into its cassette.

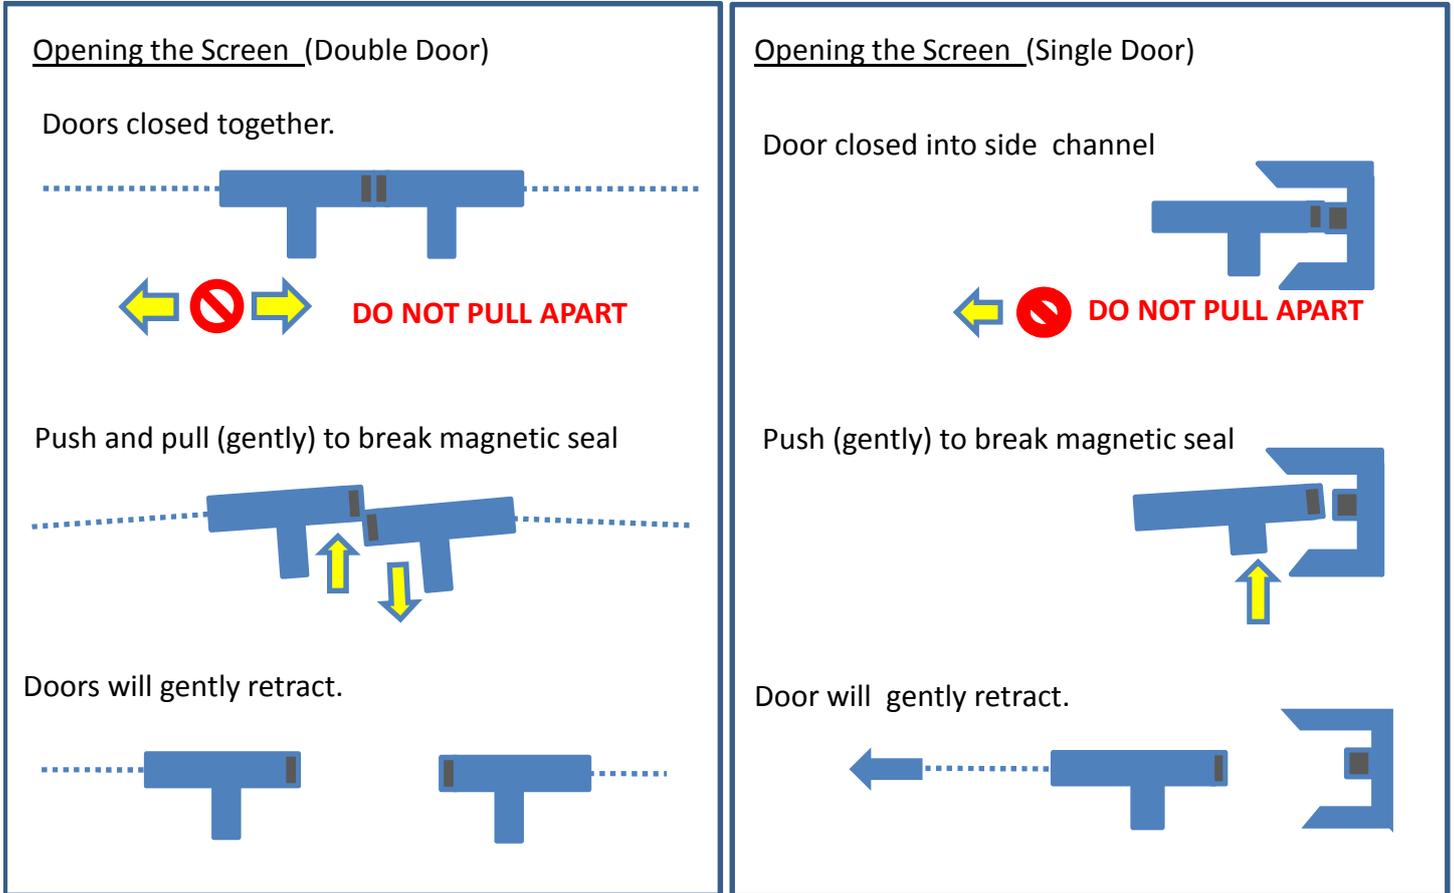

Maintenance:

To keep your screen in perfect working order please keep the guides free from debris and dirt. Should you need to clean the mesh, open the screen fully and simply lightly sponge with a mild cleaning agent and allow to dry before retracting. Simply wipe the framework with a damp soapy cloth and dry with a towel.