

Unika Window Screen



Fitting Instructions


www.flydor.co.uk

t: 01603 897 799 **e:** sales@flydor.co.uk




Unika Window Screens (All MUV models)

Step 1 Before proceeding, decide which of fitting options you wish to use and prepare the side guides prior to assembling the unit.

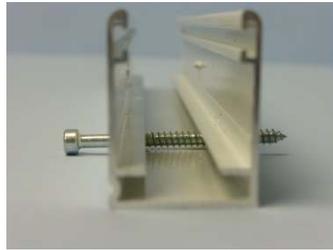


FACE FITTING Option A Drill a 3.5 mm hole through the outer groove, ensuring you remain within the recessed area in pic 2.

(Tip) Use a 2mm bit for the pilot hole into the frame. Please note you will need a hex bit for the screws

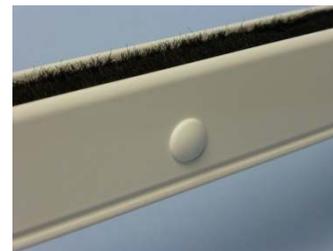

FACE FITTING Option B Drill directly through the guide using a 3mm bit., ensuring you remain within the recessed area as in pic 2. Open the front facing hole to 7mm and use the cover caps provided for a neat finish.


(Tip) Use a small screw (3.5x 16) to affix to frame.

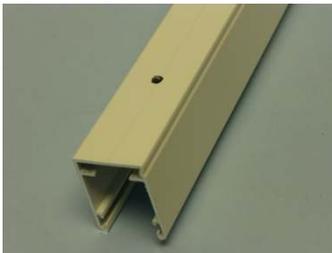

RECESS FITTING Option C Drill 3.5 mm holes through the sides of guides, for directly fixing into the recess. Typically two or three depending on height.



(Tip) Use the special tool 8460.0 to allow the fluffy pile to be safely moved when fitting.

Step 2 Fitting the Concealed Catches to the side guides.

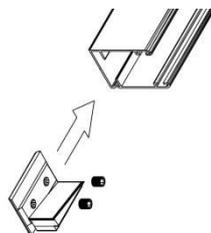


OPTIONAL INTERMEDIATE STOPS. If using the optional intermediate stops, slide into the guide ensuring the "wedge" is to the (grooved) front of the side guide. Leave loose, adjust to desired height once the screen has been installed.

(Tip) Gently does it! Avoid overtightening the grub screws when adjusting. This can cause damage to the side guide and failure to work properly

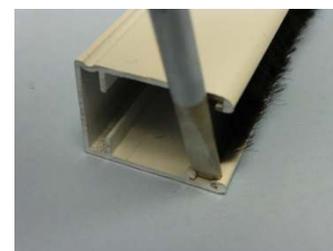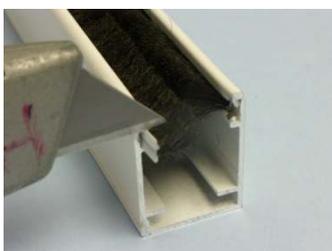


To avoid the fluffy pile being pulled back into the cassette during use. Trim about 6mm off the length of the pile. Simply crimp the channel top and bottom with a flat headed screwdriver and hammer.
(Tip) Gently does it! Avoid bending the guide out of shape by hitting too hard.

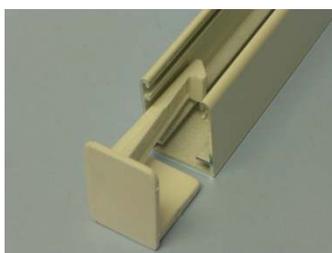

Slide the catches (marked L or R) into the appropriate guide as shown. Ensure the hook is to the (grooved) front. Crimp the guide to hold the catch firmly in place. This prevents catches being forced out in operation.

(guides are shown with no pile for illustration purposes)

Step 3 Preparing the Cassette prior to assembling the unit.

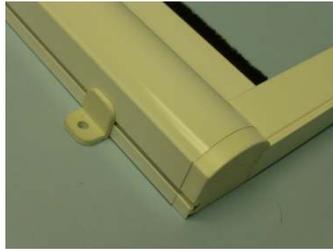


FACE FITTING Slide the face fitting L into the groove on the top of the cassette .



RECESS FITTING Insert the additional fluffy pile into the groove in the top of the cassette. The M bracket is directly fixed to the top of the recess and the cassette simply clicks in place .

Step 4 Assembling the unit prior to fitting.

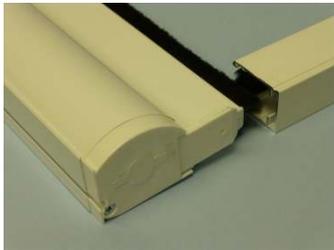


Push the side guides into place ensuring the lugs are correctly located. There should be no gaps as per pic 2.

Step 5 Installation of the unit.



FACE FITTING Offer the screen against the frame, ensure the screen is square, then mark the fixing points. Carefully drill the pilot holes. Loosely fit the screen in place using suitable screws. Check operation of screen, before tightening.

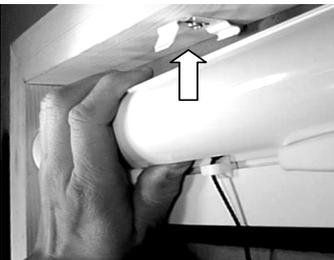

RECESS FITTING Offer the screen into the recess, ensure the screen is square, then mark the fixing points for M clips. Remove the screen, Directly fit the M Clips to the top of recess. Click the screen into place. Mark the fixing points for side guides. Directly fix the side guides with suitable screws and fittings if required.

Step 6 Operation of the unit.

To operate the screen. Pull down smoothly and simply clip into place. To open, **TILT** the bottom bar to release from catches . Allow the screen to fully retract back into its cassette housing. .

Maintenance;

To keep your screen in perfect working order please keep the guides free from debris and dirt. Should you need to clean the mesh, open the screen fully and simply lightly sponge with a mild cleaning agent and allow to dry before retracting. Simply wipe the framework with a damp soapy cloth and dry with a towel.

