

# Unika Screens All models



## Mesh Replacement

[www.flydor.co.uk](http://www.flydor.co.uk)

**t:** 01603 897 799 **e:** [sales@flydor.co.uk](mailto:sales@flydor.co.uk)




# Retractable Screen Mesh Replacement

This is a generic guide designed for the **Unika** retractable screens. Instructions are the same for Vertical or Horizontal Screens.

1. Close the screen so the mesh is totally retracted into the cassette.
2. Remove the cassette from the side guides. (This may require the screen to be removed from the window).
3. Remove the RIGHT cassette end cap (with safety brake if fitted). Note the fitting of the sleeve (Bush).
4. Remove the screw from the LEFT hand cassette end cap (Spring end).
5. Carefully prise the LEFT hand cassette end cap out approx. 50mm. **WARNING** the end cap will twist as the tensioned spring is withdrawn, so hold securely!
6. Carefully allow the spring to unwind slowly counting the rotations as you go.
7. When there is no further tension in the spring, withdraw it fully from the cassette case.
8. Remove the mesh, tube and pull bar assembly from the cassette housing.
9. Take note of the fitting of the handles and carefully prise out a pull bar end cap.
10. Slide the mesh out from the pull bar.
11. Re-assembly is the reverse of the above.

*Tip; The Pull bar end caps can be troublesome to get out without damaging them. Replace with new ones to save time and effort!*

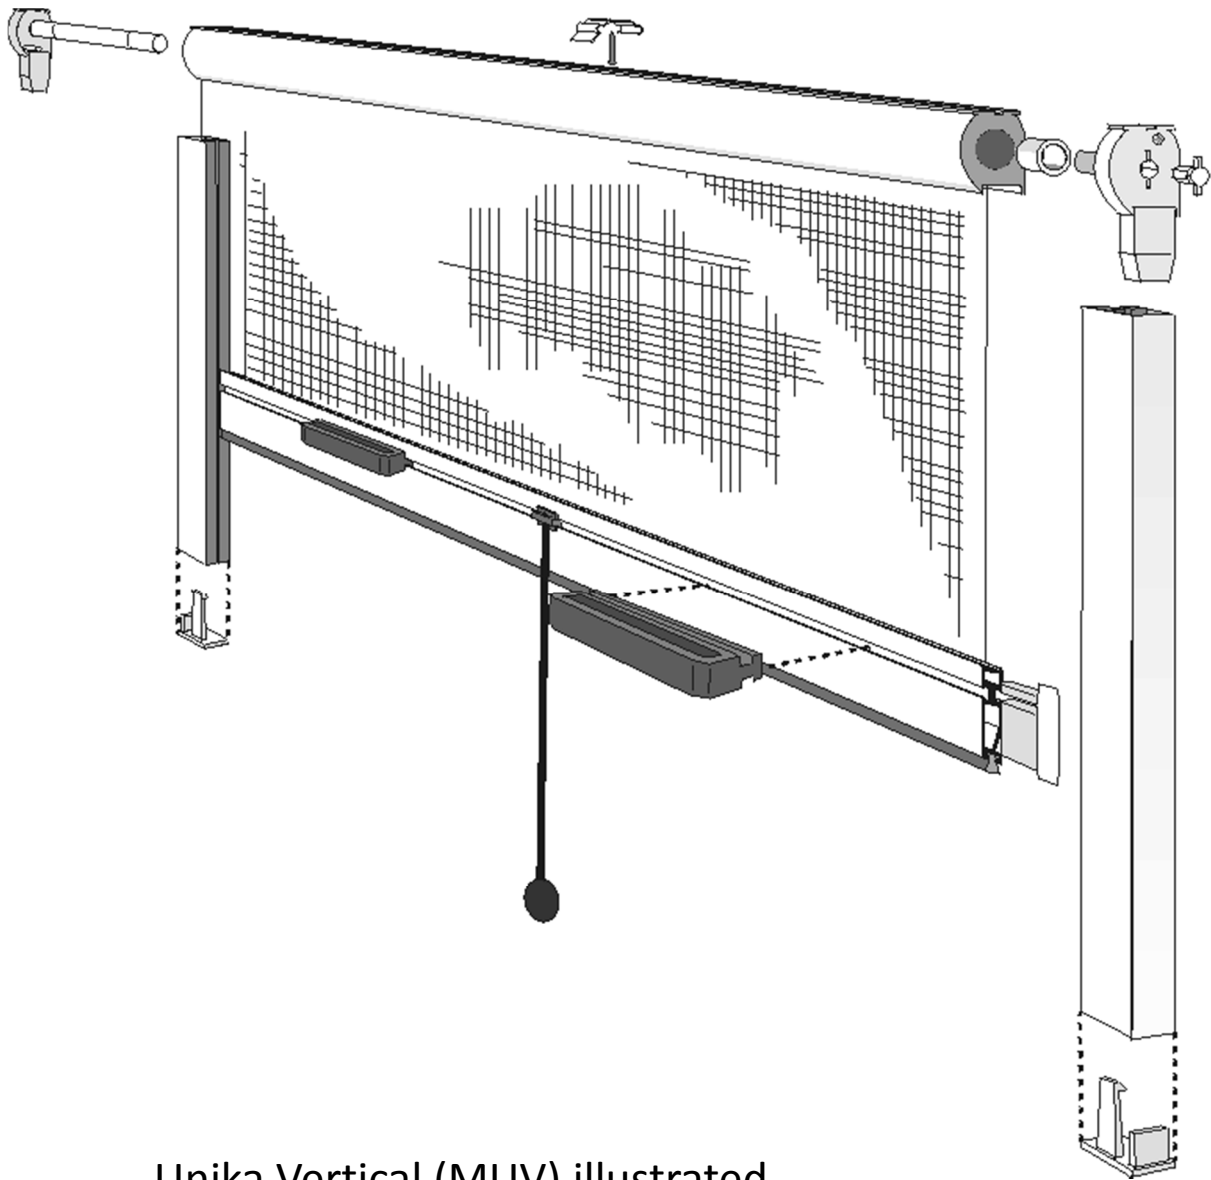

Unika Vertical (MUV) illustrated

