

Easy Mount Curtain



Fitting Instructions

www.flydor.co.uk

t: 01603 897 799 **e:** sales@flydor.co.uk



PVC Easy Mount Curtain

Prior to installation unroll the PVC strips and place them on a flat clean surface in a warm atmosphere for a minimum of 24 hours. This will allow them to return to their original form.

Mount the head rail in either the Soffit or Face Fixing position, as shown in the [diagrams 1 and 2](#).

Begin attaching the PVC strips, place the first strip at one end, ensuring the concave side faces towards you. Continue mounting strips 3, 5, 7 etc. leaving one (or two) peg(s) free between each. [See diagrams 3 and 4](#).

Attach strips 2,4,6 etc. ensuring the concave side faces away from you. [See diagrams 3 and 4](#).

You might need to overlap the first/last strip on more pegs.
Once all the strips are hung trim the strips so they are 20mm (3/4") above the floor.

Diagram 1
Soffit Position

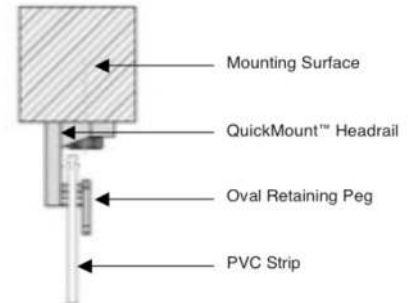


Diagram 2
Face Fixing Position

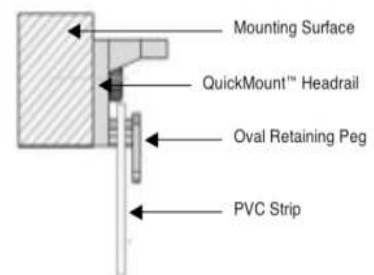


Diagram 3
Front View Strip Spacing

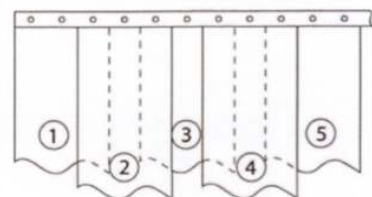


Diagram 4
Concave Sides Interlinking



