

## Nova & Regal Door Screen



## Fitting Instructions

[www.flydor.co.uk](http://www.flydor.co.uk)

**t:** 01603 897 799 **e:** [sales@flydor.co.uk](mailto:sales@flydor.co.uk)



# HINGED PANEL DOOR

# *Nova And Regal Models*

*Please read through before installing your door.*

Your Panel Door Pack will consist of the following. 1. Fully assembled Door. 2. Door Fittings. 3. Subframe (*if ordered*) flat packed.\* NO Fixings are supplied.

## **Subframe (Metal profile)**

Fit together the three or four sided subframe with the push in PVC corner pieces. Pre drill assembled frame as follows A. Drill Small pilot hole through whole of profile. B. Open up hole in front face to 10mm. C. After fixing to existing frame by using suitable screws, use 10mm cover caps to finish




*Note; If using the PVC Packer subframe, cut to desired lengths and directly fix to existing frame.*

## **Installing the Door.**

### **1. Fit the hinges.**

These are in two main parts plus a pin.  
(Note Hinges may be two part fixed pin).  
Offer up door to frame, and mark where hinges are to go. **pic A** For lift out doors fit with the pin facing up as in **pic B**

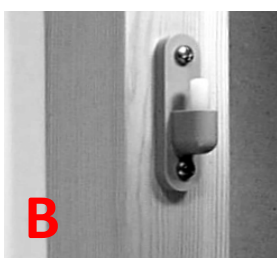


Part hinge fitted to existing frame



Rest of part hinge fitted to Door profile

## 2. Fit handle.

Drill small pilot hole and screw direct to frame.

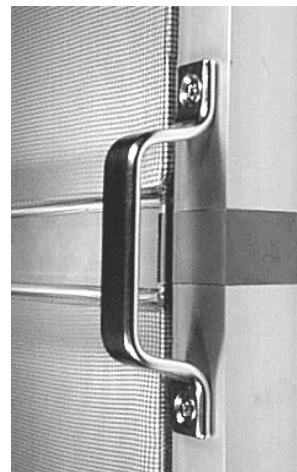

## 3. Fitting magnetic catches.

Screw the body of the magnetic catch to the edge of the screen door. *pic C* Hang the door and close onto the frame. With the catch in place mark and screw into position.



*pic D*



## Maintenance.

Your Panel door can easily be lifted off the hinges for storage when not required.

The frame and mesh can be sponged clean with a mild detergent solution, when needed. No further maintenance is required.



*\* Subframes may be supplied assembled for transporting purposes.*

