

# Strip Curtain Doors Fitting Instructions




[www.flydor.co.uk](http://www.flydor.co.uk)

t: 01603 897 799

e: [sales@flydor.co.uk](mailto:sales@flydor.co.uk)



# PVC Header Rails

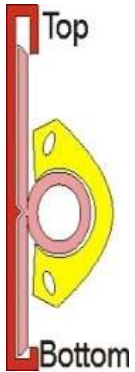

Screw directly to frame through backing rail ensuring that the bigger lip is at the top. Lift screen and push gently up into the top of the backing plate and lower into bottom lip.



# Stainless Steel Header Rails

(All types of strips with plate sets)

Screw directly into the recess, or to frame through the predrilled holes in the headrail as required. Hang the strips starting from one end so there is an overlap of at least 1 hook on each strip.



## Maintenance;

For Mesh and PVC strips, gently sponge over with a mild detergent solution, rinse and leave hanging to dry. A soft bristled brush can be used on the Mesh strips if required. Replacement strips are available for curtains using the S/Steel headrail system.



